

Adjust the motion detection mode of a Slim Line Doorbell Camera

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

You can switch between Motion Detection 2.0 and Motion Detection 1.0 using the GoSafer Security customer portal.

Platform	Customer Website
Content type	Reference
Source last updated	2025-06-04

Procedure

To adjust the motion detection mode

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Video.
3. Click Settings.

Using the Video Device dropdown menu, select the desired device.

1. Click Video Device Info.

Using the Motion Detection dropdown menu, select the desired motion mode.

1. Click Save.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/Video/Video_Settings/Adjust_the_motion_detection_mode_of_a_Slim_Line_Doorbell_Camera

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:16 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:16 UTC by Jerdenn Calag