

Arm the system remotely

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Arming the system sets the security sensors to an alarm state. The Armed Away status sets both contact sensors and motion sensor into an alarm state, while Armed Stay status only sets contact sensors ...

Platform	App + Web
Content type	How-to / Configuration
Source last updated	2025-06-04

Procedure

Step-by-step guide: Screenshots and videos are placed with the instruction they illustrate.

Arming the system sets the security sensors to an alarm state. The Armed Away status sets both contact sensors and motion sensors into an alarm state, while Armed Stay status only sets contact sensors to an alarm state.

Arming commands
Arming commands

Note: If the system is not arming properly, check if any unbypassed sensors are open. If the system continues to be unable to arm remotely, contact your service provider.

Arming options

When arming using the Alarm.com app or GoSafer Security customer portal (powered by Alarm.com), some of the following options may be available for you to select. Options vary depending on your system's configuration.

- *Silent Arming* - This allows you to arm the system without any noise. By default, the panel makes exit delay beeps when you arm your system.
- *No Entry Delay* - This allows the system to bypass the entry delay once the system is armed. Entry delay is the time set to allow you to walk from an entry/exit zone to the location of your panel to disarm the panel.
- *Bypass Open Zones* - This allows the system to bypass open zones while arming the system. This feature can be used to attempt to force the system to arm regardless of zones that may be open. Zones that are bypassed will not trigger an alarm on the system.

To arm the system using the Alarm.com app:

1. Log in to the Alarm.com app.
2. In the *Security System* card, tap . The button is light blue with the word 'Disarmed' in bold black text.
3. Select the desired arming options, if applicable.
4. Tap either **Arm (Stay)** to arm the system to stay mode, or **Arm (Away)** to arm the system to away mode.

To arm the system using the GoSafer Security customer portal (powered by Alarm.com):

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click **Disarmed** in the *Security* card.
3. Select the desired arming options, if applicable.
4. Click either Stay to arm the system to stay mode, or Away to arm the system to away mode.

To arm the system using Scenes:

Scenes allow you to configure a button on the Alarm.com app and GoSafer Security customer portal (powered by Alarm.com) that triggers multiple actions across multiple devices at once. For more information about Scenes, see [How do Scenes work?](#).

1. Log in to the Alarm.com app or GoSafer Security customer portal (powered by Alarm.com).
2. In *Scenes*, select the Scene you want to run that includes the arming command.
 - For more information about creating or editing Scenes, see [Create/edit a Scene](#).
3. Confirm that you want to send the command to run that Scene.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
[https://answers.alarm.com/Customer/Website_and_App/System_Management/System_Usage/Arm the system remotely](https://answers.alarm.com/Customer/Website_and_App/System_Management/System_Usage/Arm_the_system_remotely)

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:06 UTC by Jerdenn Calag

Updated 2026-09-01 16:40:45 UTC by Jerdenn Calag