

Change thermostat cool setpoint control settings

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

The thermostat cool setpoint control settings determine the maximum and the minimum selectable temperatures on the thermostat for the Cool mode.

Platform	App + Web
Content type	Reference
Source last updated	2025-06-04

Procedure

To change thermostat cool setpoint control settings using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap Thermostats.
3. Tap [Settings].

If there are multiple thermostats in your system, tap the name of the thermostat to be adjusted.

1. Tap Device Settings.

Use the Cool Setpoint slider to change the thermostats maximum and the minimum selectable temperatures while the thermostat is in cool mode.

1. Tap Apply.

To change thermostat cool setpoint control settings using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).

In the Thermostat card, click [Details].

1. Click Advanced Configuration.

Using the dropdown menu, select the desired thermostat.

Locate the Cool Setpoint setting and click [Up] or [Down] to change the thermostats maximum and the minimum selectable temperatures while the thermostat is in cool mode.

1. Click Save.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/Home_Automation/Thermostats/Change_th

[ermostat cool setpoint control settings](#)

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:00 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:00 UTC by Jerdenn Calag