

Change thermostat temperature swing settings

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

The thermostat temperature swing is the number of degrees above (for cooling) and below (for heating) the target setpoint the HVAC system will allow the temperature to fluctuate before cycling back ...

Platform	App + Web
Content type	Reference
Source last updated	2025-06-04

Procedure

To change thermostat temperature swing settings using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap Thermostats.
3. Tap [Settings].

If there are multiple thermostats in the system, tap the name of the thermostat to be adjusted.

1. Tap Device Settings.

In Overshoot, tap [Add] or [Minus] to adjust the number of overshoot degrees.

1. Tap Apply.

Note: The minimum swing is 0.5 degrees and the maximum swing is 3 degrees.

To change thermostat temperature swing settings using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).

In the Thermostat card, click [Details].

1. Click Advanced Configuration.

In Swing, click [Up] or [Down] to adjust the number of swing degrees.

1. Click Save.

Note: The minimum swing is 0.5 degrees and the maximum swing is 3 degrees.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/Home_Automation/Thermostats/Change_thermostat_temperature_swing_settings

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:00 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:00 UTC by Jerdenn Calag