

Delete an image from the Image Sensor Gallery

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Image Sensor Gallery images can be deleted from the website and the app.

Platform	App + Web
Content type	How-to / Configuration
Source last updated	2025-06-04

Procedure

To delete an image from the Image Sensor Gallery using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap Images.
3. Tap the image you would like to delete.
4. Tap [Delete].
5. Tap Delete Image.

To delete an image from the Image Sensor Gallery using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).

In the Image Sensor card, click [Details].

1. Click the thumbnail of the image to be deleted.
2. Click [Delete] to delete the image.
3. Click Yes.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Image_Sensor/Image_Sensor_Usage/Delete_an_image_from_the_Image_Sensor_Gallery

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:02 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:02 UTC by Jerdenn Calag