

Remove a video device

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Most Alarm.com video devices (e.g., cameras, Video Servers, SVRs, etc.) can be removed from an account using the app or website.

Platform	App + Web
Content type	How-to / Configuration
Source last updated	2025-06-04

Procedure

To remove a video device using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap [Menu].
3. Tap Manage Devices.
4. Tap [More Options] next to the desired video device.

In Actions, tap [Delete].

1. Tap Delete.

To remove a video device using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Settings.
3. Click Manage Devices.
4. Click [More Options] next to the desired video device.
5. Click Remove Device.
6. Click Remove.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original	Alarm.com	reference:
https://answers.alarm.com/Customer/Website_and_App/Video/Video_Settings/Remove_a_video_device		

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:18 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:18 UTC by Jerdenn Calag