

Smart Home Skill - Remove equipment from Amazon Alexa

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

This is primarily a video or reference page. Open the original article link below for the current content.

Platform	Mobile App
Content type	How-to / Configuration
Source last updated	2026-01-07

Procedure

To remove a Smart Home device

1. Open the Amazon Alexa app.
2. Tap [Amazon Devices].
3. Tap the device desired to be removed.
4. Tap [Delete].

For some Z-Wave devices, tap [Settings] and then [Delete].

1. Tap Delete in the pop-up window.

The device is now removed from the list.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Home_Automation/Amazon_Alexa_Smart_Home_Skill/Smart_Home_Skill_Remove_equipment_from_Amazon_Alexa

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:29:55 UTC by Jerdenn Calag

Updated 2026-09-01 00:29:55 UTC by Jerdenn Calag