

Battery Absent Trouble

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Battery Absent Trouble indicates that the panel battery is or was missing.

Platform	General / Device
Content type	How-to / Configuration
Source last updated	2023-11-17

Procedure

How to resolve

1. Verify that the panel battery is securely in place.

If you need additional support, contact your service provider.

Source and support

For GoSafer Security assistance, visit [gosaferssecurity.com](https://answers.alarm.com).

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/System_Management/Trouble_Condition_Help/Battery_Absent_Trouble

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:09 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:09 UTC by Jerdenn Calag