

Change the brightness or color of a SkyBell Doorbell Camera's LED

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Alarm.com Doorbell Cameras have an LED with variable color and brightness which can be adjusted from the website or app.

Platform	App + Web
Content type	Reference
Source last updated	2025-12-08

Procedure

To change the brightness/color of a SkyBell's LED using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap [Doorbell Video Call] or [Video].
3. Tap [Settings].

4. Tap LED.

Use the Brightness slider to adjust the brightness.

Drag the selector on the color palette to the desired color to change the LED color.

1. Tap [Check] to save the changes.

To change the brightness/color of a SkyBell's LED using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Video.
3. Click Settings.
4. Select the desired SkyBell device.
5. Click General.

Drag the LED Brightness slider to adjust the brightness.

[Skybell Led Settings]

1. Click the Doorbell LED Color swatch and drag the selector to change the LED color.
2. Click Save.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Video/Video_Settings/Change_the_brightness_or_color_of_a_SkyBell_Doorbell_Camera's_LED

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:16 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:16 UTC by Jerdenn Calag