

Create an auto re-arming rule

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Automated System Re-Arming is a feature that lets you program your security system to automatically switch to an Armed state if specific criteria are met.

Platform	Customer Website
Content type	How-to / Configuration
Source last updated	2025-06-04

Procedure

To create an Auto Re-Arming rule

Rules can only be created and updated using the GoSafer Security customer portal (powered by Alarm.com).

Note: If an Auto Re-Arming schedule needs to be adjusted, click Delete for the current schedule that needs adjustments, and then create a new Auto Re-Arming Schedule with the adjustment.

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Automation.

3. Click Auto Re-Arming.

Note: If business hours are set up, you can choose to Use business hours in Choose Schedule Type to auto re-arm the system after a specified timeframe of inactivity outside of business operating hours.

In Create Auto Re-Arming Schedule, use the dropdown menus to select the automated system action and the desired duration of inactivity.

If business hours are not used for the Auto Re-Arming schedule, use the dropdown menus to select what days and hours of the day the re-arming schedule is active.

1. Verify the Auto Re-Arming schedule is configured as desired.
2. Click Save.

Frequently asked questions

Can Auto Re-Arming be used with a partitioned system?

Yes. Auto Re-Arming supports partitioned systems. You can choose to automatically re-arm an individual partition or all partitions when creating an Auto Re-Arming schedule.

What is considered as no system activity?

Auto Re-Arming takes into consideration every security sensor on the system when it is looking for no activity on the system. The system looks for no activity on all the sensors before auto re-arming the partition.

Only security sensors affect auto re-arming system activity. Activity on other types of equipment (e.g., Z-Wave lights turning on/off, door locks locking/unlocking, etc.) are not considered as system activity for Auto Re-Arming.

Can more than one Auto Re-Arming schedule be set up?

Yes. Multiple Auto Re-Arming schedules can be set up for various times throughout the day.

Note: Schedules can also be set up to start in the evening and end in the

morning of the following day.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/Commercial/Commercial_Management/Create_an_auto_rearming_rule

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:29:51 UTC by Jerdenn Calag

Updated 2026-09-01 00:29:51 UTC by Jerdenn Calag