

Edit a Geo-Device

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

A Geo-Device is a geographically aware iPhone or Android device that can be configured to automate your devices and initiate notifications based on the location of the Geo-Device relative to your ...

Platform	App + Web
Content type	How-to / Configuration
Source last updated	2025-11-05

Procedure

To edit a Geo-Device using the Alarm.com app

1. Log in to the Alarm.com app.
2. Tap [Menu].
3. Tap App Settings.
4. Tap Device Name.
5. Enter the desired name for the mobile device.

To edit a Geo-Device using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Settings.
3. Click Places.

In Manage Devices, click the name of the Geo-Device to be edited.

In the Edit Device Name field, enter the desired name for the Geo-Device.

1. Click Save.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Mobile_Features/Geo-Devices/Edit_a_Geo-Device

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:03 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:03 UTC by Jerdenn Calag