

Fire Sensor Trouble

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Fire Sensor Trouble indicates that your smoke detector may not be properly connected or installed correctly.

Platform	General / Device
Content type	How-to / Configuration
Source last updated	2023-11-20

Procedure

How to resolve

Contact your service provider for assistance.

Source and support

For GoSafer Security assistance, visit [gosaferssecurity.com](https://answers.alarm.com/Customer/Website_and_App/System_Management/Trouble_Condition_Help/Fire_Sensor_Trouble).

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/System_Management/Trouble_Condition_Help/Fire_Sensor_Trouble

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:09 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:09 UTC by Jerdenn Calag