

How do I control multiple partitions of a security panel?

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Secondary partitions become available on a customer account after the partition is enabled in the security panel and at least one sensor is assigned to it, with no additional service package cost ...

Platform	App + Web
Content type	Reference
Source last updated	2026-03-06

Procedure

Control multiple partitions using the Alarm.com app

To view and control secondary partitions individually from the app home screen, you can scroll through them on the Security System card by swiping left or right on the partition status and then tapping the partition to send commands to the individual partition.

Multiple partitions can be commanded at once by using the Security System menu. Tap the Security System card on the home screen and use the checkboxes to select multiple partitions to send commands to.

[File]

Control multiple partitions using the GoSafer Security customer portal (powered by Alarm.com)

Partitions can be controlled through the Security System page on the GoSafer Security customer portal (powered by Alarm.com). On this page, you can select any desired partition and send commands to individual partitions.

[Web Partitions]

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original	Alarm.com	reference:
https://answers.alarm.com/Customer/Website_and_App/System_Management/System_Usage/How do I control multiple partitions of a security panel		

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:07 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:07 UTC by Jerdenn Calag