

Remotely arm and disarm multiple partitions at once

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

Users can remotely arm and disarm separate partitions individually using the website or app.

Platform	App + Web
Content type	Reference
Source last updated	2025-06-04

Procedure

To arm/disarm multiple partitions using the Alarm.com app

1. Log in to the Alarm.com app.
- In the Security System card, swipe to navigate to the partition to adjust. Then tap to select the partition.
- [ClipboardE21710Cf6593Caa5E33F65Fbfd0D0A70B][ClipboardEfba193167B19Eb04D005206291564D1A]

Note: The arming states can also be changed from the Security System page by tapping [Details] in the Security System card.

1. Tap to select the desired arming state.

To arm/disarm multiple partitions using the GoSafer Security customer portal (powered by Alarm.com)

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).

In the Security System card, click any partition.

[Security System Card]

Note: The arming states can also be changed from the Partitions page by clicking [Details] in the Security System card.

1. Click to select the desired arming state.

Source and support

For GoSafer Security assistance, visit gosafersystems.com.

Original

Alarm.com

reference:

https://answers.alarm.com/Customer/Website_and_App/System_Management/System_Usage/Remotely_arm_and_disarm_multiple_partitions_at_once

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:07 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:07 UTC by Jerdenn Calag