

Smart Home Skill - Change a device name in Amazon Alexa

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

This is primarily a video or reference page. Open the original article link below for the current content.

Platform	Mobile App
Content type	How-to / Configuration
Source last updated	2026-01-07

Procedure

To change the device name on the Amazon Alexa app

Note: Updating a name within the Amazon Alexa app does not update the device name on Alarm.com.

1. Open the Amazon Alexa app.
2. Tap [Amazon Devices].
3. Tap the device you would like the rename.
4. Tap Edit Name.
5. Enter a new name.
6. Tap Return or Done on the keyboard or tap a different area of the screen to save the changes.

Source and support

For GoSafer Security assistance, visit gosafersecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Home_Automation/Amazon_Alexa_Smart_Home_Skill/Smart_Home_Skill_Change_a_device_name_in_Amazon_Alexa

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:29:55 UTC by Jerdenn Calag

Updated 2026-09-01 00:29:55 UTC by Jerdenn Calag