

Turn off a video device's LED

GoSafer Security Knowledge Base

This operational reference is organized for GoSafer Security customers and staff. Alarm.com product names are retained where required for technical accuracy.

Overview

The LED on a video device can be turned on or off at any time.

Platform	Customer Website
Content type	Reference
Source last updated	2025-12-08

Procedure

To turn off a video device's status LED

1. Log in to the GoSafer Security customer portal (powered by Alarm.com).
2. Click Video.
3. Click Settings.
4. Select the desired video device.
5. Click General.
6. Click the Status LED toggle switch to turn off the video device's status LED.
7. Click Save.

Source and support

For GoSafer Security assistance, visit gosaferssecurity.com.

Original Alarm.com reference:
https://answers.alarm.com/Customer/Website_and_App/Video/Video_Settings/Turn_off_a_video_device's_LED

Always verify safety, installation, compatibility, and current UI details against the original manufacturer documentation before operational use.

Revision #1

Created 2026-09-01 00:30:18 UTC by Jerdenn Calag

Updated 2026-09-01 00:30:18 UTC by Jerdenn Calag